


BOOK & TREASURE BOX

- 1 - 1 x 6 x 9 1/2" Bottom
- 1 - 1 x 6 x 6" Beveled End
(See illustration below)
- 1 - 1 x 6 x 6" Top
- 1 - 1 x 4 x 8 3/4" Back
- 1 - 1 x 4 x 6" Front
- 2 - 1 x 4 x 4" Sides

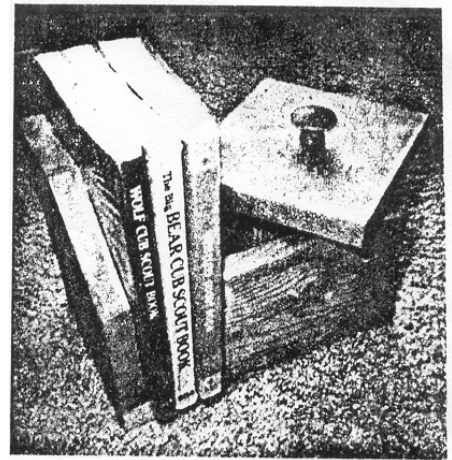

1. Nail and glue together a three sided bow with front and side pieces.
2. Attach the back with one side extending out.
3. Attach the bottom with the extra extending past the long part of the back.
4. Attach the beveled end to the bottom and the back.
5. Add a knob to the top for a handle.
6. Use hinges or small pieces of wood, glued inside the top to keep it from sliding around.

